



Installation Instructions

MonitorMaker® Corner Connector Kit

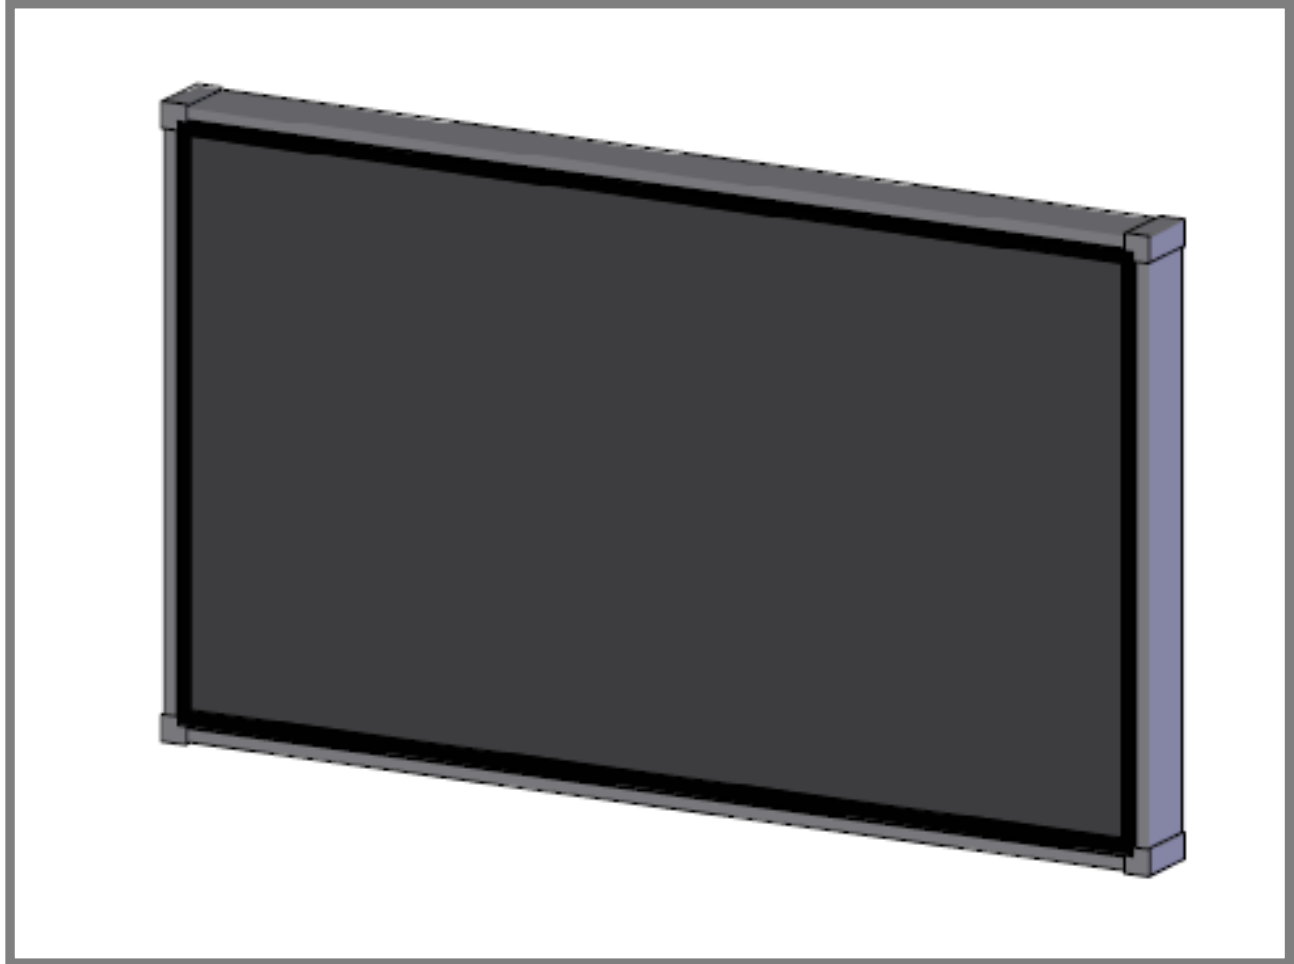


Figure 1

INSTALLATION INSTRUCTIONS

Before you begin

These instructions illustrate the installation of the Stylmark's MonitorMaker corner connector kits. If you have questions during assembly, call 800-328-2495 to request technical assistance.

Tools you'll need

- Tape measure
- Chop saw
- Blade for cutting aluminum
- ¼" wall anchors
- Drill and bits

Please read these instructions carefully before beginning installation.

Stylmark Installation Instructions: MonitorMaker – Corner Connector Kit

Getting Started:

It is assumed that the installer has experience in general fabricating and has the skills and knowledge to select the appropriate type of fasteners appropriate for the mounting surface. In addition, the surface to which this mounts is to be flat and the monitor installed. Notching may be required for unique installations to provide clearance for cables and is not included in this installation instruction guide.

Step-by-Step Instructions:

1. Position a corner post so that it is square against the wall and tight to a corner of the monitor. **See Figure 2.**
2. Insert the neoprene gasket and square washer into the corner post and run the wall anchor through them and into the wall. As the anchor is tightened, the gasket is compressed and secures the post. The gasket can be compressed down to $\frac{1}{2}$ " for appropriate stability. **See Figure 3.**
3. Repeat for each corner of the monitor.
4. Cut two pieces of trim $\frac{1}{8}$ " less than the width of the monitor and two pieces $\frac{1}{8}$ " less than the height of the monitor.
5. Slide the trim into the slots between the corner posts. **See Figure 4.**
6. Press the endcaps into the posts. **See Figure 5.**

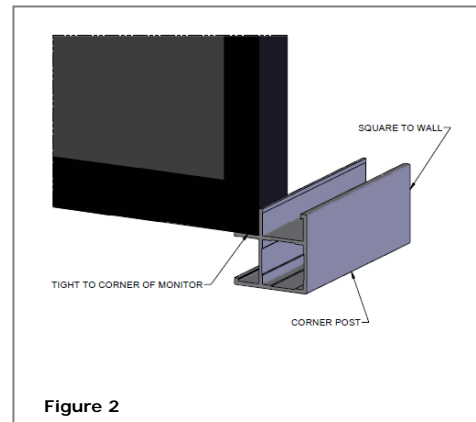


Figure 2

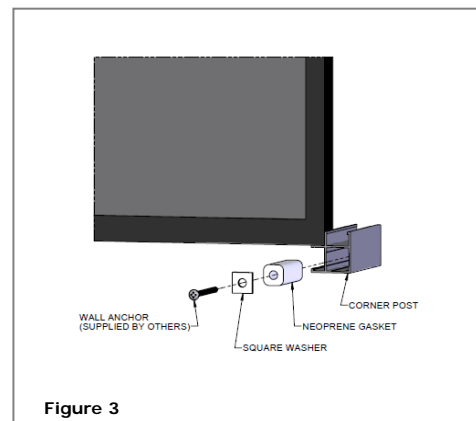


Figure 3

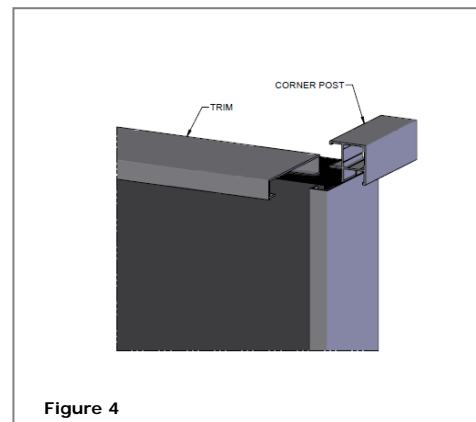


Figure 4

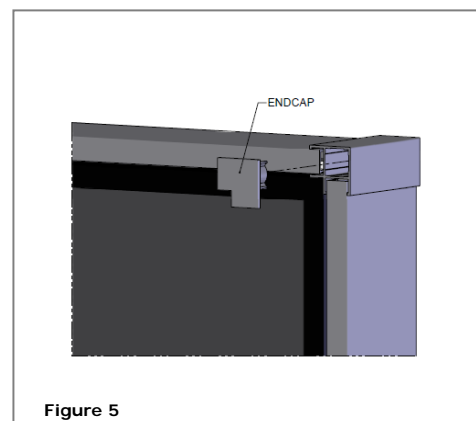


Figure 5